

•*Attention THE WINDSCREEN installation is mounted with the arm to the right (Fig. 14)

- *Insert the rubber seal on the half-shell (fig. 01)
- *Insert the other rubber seal on the handlebar stem (Fig. 02)
- *Insert the half shells on the handlebar stem (Fig. 03)
- *put the screws on the inside of the holes , by inserting in the part opposite the nuts (fig. 04)
- *Screw with Allen Key #5 (not supplied) , but not totally secure)in cross direction (fig.05)
- *slightly tilt , until the desired position (Fig. 06)
- *take the port block screen and insert the bolt (Fig. 07)
- *introduce the port block screen on the attachment to handlebar (Fig. 08)
- *Insert nut (fig.09) , make sure that the latch of the display port is at the end of the stroke and does not rotate (Fig. 10)
- *Screw with the appropriate wrench #5 (not supplied), until the display port is fixed and will not move
- *Insert the screen into the slit , up to block; •*To remove the screen , raise the lever lock screen and slip it off;

Supplied Parts :

Attachment to handlebar n. 01*

Shell n. 02

Display Port n. 01

Shims n. 04



Screws Kit n. 01

Screen n. 01

Tools to use : Allen key from 5 (not supplied)





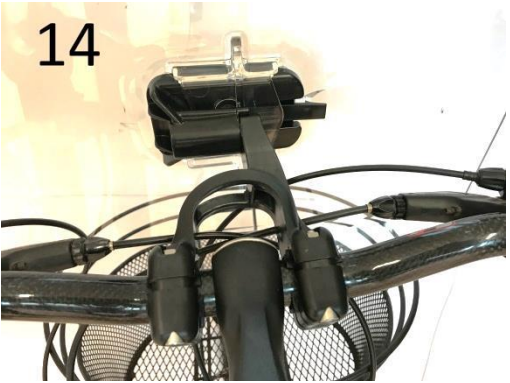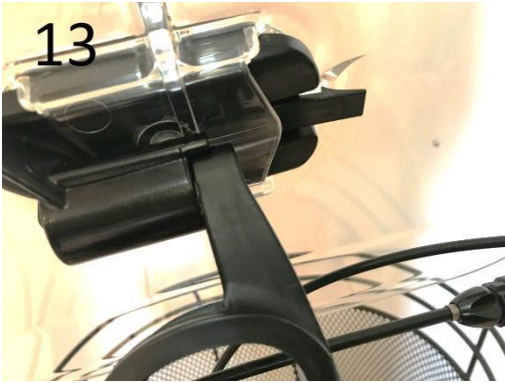

Attacco Manubrio




Semiguscio



Portaschermo



Spessori

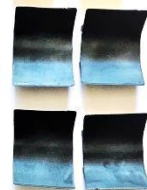

Kit Viti

